

# FROLI\_Scor Montageanleitung

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Kauf dieses FROLI - Markenproduktes. Bitte beachten Sie bei dem Aufbau die nachfolgende Montageanleitung. Sollten Sie trotz sachgerechter Montage und Bedienung noch Fragen haben, wenden Sie sich bitte an Ihren Fachhändler. Das FROLI Team wünscht Ihnen viel Freude mit diesem Bett und allzeit einen gesunden, erholsamen Schlaf.

**ACHTUNG! VOR DER MONTAGE BITTE UNBEDINGT LESEN!**


Damit das Bettsystem auch bei größeren Belastungen ausreichend Festigkeit und Stabilität besitzt, werden die Elemente fest miteinander verbunden. Die Verclipsungen sind bewusst fest angelegt, um ein versehentliches Öffnen unter Belastung zu vermeiden.

## Aufbauhilfe


FROLI\_Scor lässt sich durch die Wahl des Lochabstandes eng, mittel oder weit für alle Bettmaße verclipsen. Entsprechend lässt sich der Härtegrad für das jeweilige Körpergewicht variieren. Bei einem Körpergewicht über 90 kg empfehlen wir grundsätzlich die enge Verclipsung.

### Schritt 1

- Legen Sie die einzelnen Fußkreuze in eine einheitliche Richtung aus.  
Tipp: Nutzen Sie den aufgebrachten Pfeil auf den Elementen und legen Sie diese in Pfeilrichtung vom Körper weg.
- Wählen Sie einen engen, mittleren bzw. weiten Lochabstand.

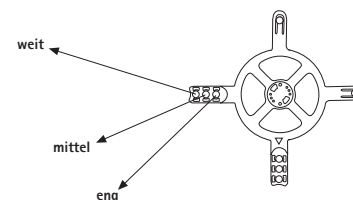


- Zum Verbinden der Fußkreuze wird der Bolzen herunter gedrückt, um anschließend die Fußkreuze ineinander zu schieben.

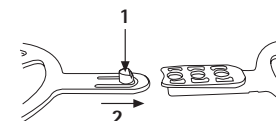


### Schritt 2

- Nach der Montage der Fußkreuze zu einer Matte, setzen Sie jeweils ein Federelement mit dem Langloch in die Mitte des Fußkreuzes auf.
- Drehen Sie dann das Federelement um 90 Grad bis das Langloch in den Knopf des Fußkreuzes einrastet.
- Die grauen, weichen Elemente setzen Sie vorzugsweise im Schulterzonenbereich (3. und 4. Reihe von oben) ein.

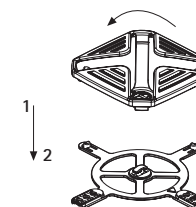

### Schritt 3

Die in der Verpackung beigelegten Lordosenstützen können im unteren Rückenbereich eingesetzt werden. Sie werden auf das Fußkreuz unter das Federelement gesetzt. Durch Drehen der Lordosenunterstützung auf soft - medium - hart lässt sich die Härte variieren.

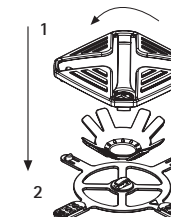

FROLI Kunststoffwerk GmbH & Co. KG · Liemker Str. 27 · 33758 Schloß Holte-Stukenbrock · Tel.: 05207 95 00 0 · Fax: 05207 - 95 00 61 · frolifreizeit@frolifreizeit.com · www.frolifreizeit.com · FAS 42167 02.2008




Set of 44

This box contains the kit for 1 complete single bed

Order-No.: 41744  
Basic pack

- 36 spring elements, normal
- 8 spring elements, soft
- 44 bases unassembled
- 8 tension units

for widths from approx. 666 - 738 mm to lengths of approx. 1884 - 2124 mm

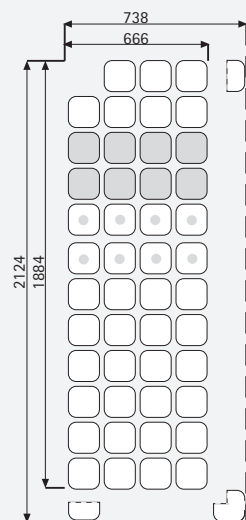

- Soft elements (shoulder zone)
- Normal elements




Set of 11

Upgrade package

Order-No.: 41745  
Upgrade package

- 9 spring elements, normal
- 2 spring elements, soft
- 11 bases unassembled
- 2 tension units

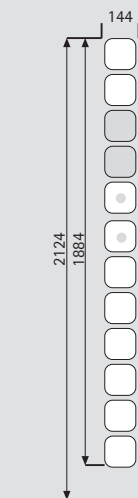

- Soft elements (shoulder zone)
- Normal elements



Set of 10

Upgrade package with tension units

Order-No.: 41746  
Upgrade package

- 10 tension units



	installation method [narrow]	installation method [medium]	installation method [wide]
spacing	30 mm	42 mm	54 mm
4 elements	666	702	738
5 elements	840	888	936
6 elements	1014	1074	1134
7 elements	1188	1260	1332
⊗ 8 elements	1362	1446	1530
9 elements	1536	1632	1728
10 elements	1710	1818	1926
11 elements	1884	2004	2124
⊗ 12 elements	2058	2190	2322
13 elements	2232	2376	2520

⊗ **Application example: FROLI\_Scor [medium hole spacing]:**  
For a width of 1.40 m and a length of 2.00 m, multiply 8 x 11 = 88 elements. This corresponds to 2 basic packages.

### Instructions for care, use and recycling

FROLI\_Scor is a high quality product made from thermoplastic polyester elastomer. This plastic is exceptionally resilient and possesses enormous ductility and elasticity. To ensure that your FROLI\_Scor System gives you many years of service, avoid exposing it to direct UV radiation, such as sunlight and do not leave the clip system rolled up for a long period. If necessary, clean the plastic elements with a mild care product. Do not use detergents, abrasive cleaners, alcohol, cellulose thinners, acetone or other aggressive agents. This product was manufactured, so that it can be dismantled in compliance with environmental legislation. After dismantling, the individual parts can be recycled.



44 Satz



11 Satz




10 Satz

Diese Box enthält den Bausatz für 1 komplettes Einzelbett

Bestellnr.: 41744 Grundpaket

- 36 Federelemente, normal
- 8 Federelemente, soft
- 44 Fußkreuze
- 8 Lordosenunterstützungen

für Breiten von ca. 666 – 738 mm und Längen bis ca. 1884 – 2124 mm

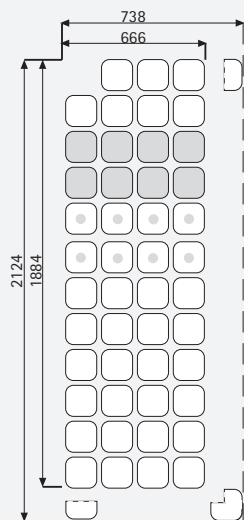


- Softe Elemente (Schulterzone)
- Normale Elemente

Erweiterungspaket (ganze Elemente)

Bestellnr.: 41745 Erweiterungspaket

- 9 Federelemente, normal
- 2 Federelemente, soft
- 11 Fußkreuze
- 2 Lordosenunterstützungen




- Softe Elemente (Schulterzone)
- Normale Elemente

Erweiterungspaket (Lordosenunterstützungen)

Bestellnr.: 41746 Erweiterungspaket

- 10 Lordosenunterstützungen



	Lochabstand [eng]	Lochabstand [mittel]	Lochabstand [weit]
Abstand	30 mm	42 mm	54 mm
4 Elemente	666	702	738
5 Elemente	840	888	936
6 Elemente	1014	1074	1134
7 Elemente	1188	1260	1332
8 Elemente	1362	1446	1530
9 Elemente	1536	1632	1728
10 Elemente	1710	1818	1926
11 Elemente	1884	2004	2124
12 Elemente	2058	2190	2322
13 Elemente	2232	2376	2520

⊗ Anwendungsbeispiel: FROLI\_Scor [Lochabstand mittel]:  
Bei einer Breite von 1,40 m und einer Länge von 2,00 m multiplizieren Sie 8 x 11 = 88 Elemente. Das entspricht 2 Grundpaketen.

**Pflege- und Gebrauchshinweis/Recycling**

FROLI\_Scor ist ein hochwertiges Qualitätsprodukt aus thermoplastischem Polyester Elastomer. Dieser Kunststoff zeichnet sich durch eine herausragende Widerstandsfähigkeit, eine enorme Verformbarkeit und Rückstellkraft aus. Um eine lange Lebensdauer Ihres FROLI\_Scor Systems zu gewährleisten, vermeiden Sie bitte die direkte UV-Bestrahlung, z. B. durch Sonne sowie das dauerhafte Aufrollen des Clipsystems. Kunststoffelemente bei Bedarf nur mit milden, handelsüblichen Pflegemitteln säubern. Keine Putz- und Scheuermittel, Alkohol, Nitroverdünnung, Azeton oder sonstige aggressiven Mittel verwenden. Dieses Produkt wurde unter Berücksichtigung von Umweltgesetzen zerlegbar hergestellt. Nach dem Zerlegen können die Einzelteile recycled werden.

## FROLI\_Scor Assembly Instructions

Dear Customer,  
Congratulations on purchasing this FROLI brand product.  
Please follow the instructions below to ensure correct assembly and use. If you have any questions, please contact your authorised dealer.  
We hope that you will enjoy this product and wish you a healthy, relaxing sleep.

**IMPORTANT! READ THESE INSTRUCTIONS BEFORE ASSEMBLY**


To ensure that the bed has the strength and stability necessary to withstand heavy loads, the elements are securely fixed together. The clips used are intentionally fixed in place to prevent accidental opening under load.

### Assembly

FROLI\_Scor can be clipped together, fitting for all measurements of beds; with narrow, medium or wide spacing by varying the distance between the holes. This enables the degree of hardness to be varied to suit your body weight. For a body weight in excess of 90 kg we recommend that you should always use the narrow clip spacing. Every space can be optimally used, because spring elements can be easily adapted to corners and bevels by twisting or by using special small elements (Upgrade package 41746).


#### Step 1

1. Lay out the individual base crosses in a uniform direction. Use the arrow marked on the elements and lay the elements in the direction of the arrow.
2. Choose narrow, medium or wide hole spacing.

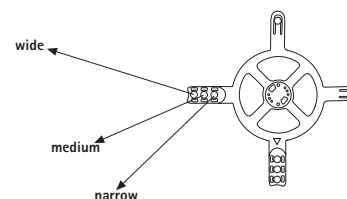


#### Step 2

1. After assembling the base crosses to form a mat, fit a spring element with slot in the middle of each base cross.
2. Then turn the spring element through 90 degrees until the slot engages in the button of the base cross.
3. The grey elements should preferably be placed in the shoulder area (3<sup>rd</sup> and 4<sup>th</sup> row from the top).

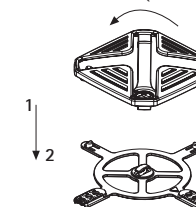

3. To connect the base crosses press down the bolts and shift them into each other.

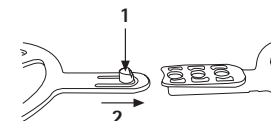

#### Step 3

The tension units provided in the package are used for lumbar support (to prevent hollow back) and can be clipped on at a later time, as required. This increases the firmness in the region of the lumbar vertebra.

To do this, clip the tension unit in between the base cross and turn around onto soft-medium-hard to vary the firmness of the spring element.

